# SIEMENS



Synco™ 700

**Universal Modules** 

# RMZ78...

Extension modules for use with controls of the Synco<sup>™</sup> 700 family.

# Use

For heating, ventilation, air conditioning and chilled water plant equipped with controls of the Synco<sup>™</sup> 700 family.

# Functions

The universal modules are designed to increase the number of inputs and outputs of Synco™ 700 controls, thus providing additional control and monitoring functions.

# Type summary

Туре	Number of	Number of	Number of relay outputs	
reference	universal	analog	N.O. contacts	Changeover
	inputs	outputs		contacts
RMZ785	8	_	_	_
RMZ787	4	0	3	1
RMZ788	4	2	1	1
RMZ789	6	2	2	2

When ordering, please give name and type reference, for example: Universal module **RMZ785** The module connector listed under "Accessories" must be ordered as a separate item, if required.

# **Equipment combinations**

The universal modules must be used in connection with controls of the Synco<sup>™</sup> 700 family. At present, the following combinations are possible:

Type of Synco device	RMZ785	RMZ787	RMZ788	RMZ789
Universal controller RMU7	-	•	•	-
Heating controller RMH760	_	٠	•	-
Boiler sequence controller RMK770	•	•	•	•
Control center RMB795	•	•	_	_
Control and monitoring unit RMS705	•	•	-	_

For details of these Synco devices, refer to Product Range Description S3110 or the document of the selected application.

#### **Product documentation**

Name	Classification number
Mounting Instructions	M3110
Product Range Description	S3110
Application catalog for Synco™700 ventilation / air conditioning plant	
Declaration of Conformity (CE)	T3110
Environmental Declaration	E311002

# **Technical design**

	The RMZ78 universal modules complement the range of Synco™ 700 controls. They cannot be operated autonomously. The universal modules are incorporated into the Synco™ 700 controls in the basic
	configuration. All settings associated with the universal modules are made on the relevant Synco™ 700 control.
	The signals from sensors, signal sources, etc., are delivered to the Synco <sup>™</sup> 700 device for handling. The control signals and commands generated by the control are fed back to the respective universal module from where they are passed on to the connected actuating devices. The universal module is powered by the relevant Synco <sup>™</sup> 700 control, which also iden- tifies and monitors the module.
Mechanical design	
Basic design	In terms of mechanical design, the extension modules are identical with the Synco™ 700 controls, No wiring is required between the individual modules or between module and controller. The electrical connections are established by attaching the

module to the control.



Synco<sup>™</sup> 700 controller with attached RMZ78... module

# Operation

**Operating**, display

and connecting elements

The extension modules have no setting and operating elements. Operation is accomplished with the help of the RMZ790 or RMZ791 operator unit. Exception is the LED, which indicates the module's operating state.

# 

- 1 Connecting elements for Synco<sup>™</sup> 700 control or another extension module
- 2 Catch for fitting the module to a top hat rail
- 3 Fixing facility for the cable tie (cable strain relief)
- 4 LED (green) for indicating the operating state
- 5 Connecting elements for another extension module
- 6 Rest for the terminal cover

#### Accessories

Accessory	Type reference	Data Sheet
Module connector	RMZ780	N3138

#### **Engineering notes**

- Fuses, switches, wiring and earthing must be in compliance with local safety regulations
- Sensor cables should not be run parallel to mains-carrying cables powering loads such as fans, actuators and pumps

# Mounting and installation notes

- The modules are designed for:
  - Mounting in a standard cabinet conforming to DIN 43 880
  - Wall mounting on an existing top hat rail (EN 50 022-35x7.5)
  - Wall mounting with 2 fixing screws
  - Flush panel mounting
- Not permitted are wet or damp spaces; the permissible ambient temperatures must be observed
- Disconnected the system from power supply prior to mounting and installing the module
- The module insert must not be removed from the terminal base!

- The module must be fitted on the right hand side of the Synco™ 700 control in the correct order, in accordance with the internal configuration
- The extension modules need not be wired, neither between themselves nor to the Synco<sup>™</sup> 700 control. The electrical connections are made automatically when attaching the modules. If it is not possible to arrange all extension modules side by side, the first of the detached modules must be connected to the previous module or the Synco<sup>™</sup> 700 control by using the RMZ780 module connector. In that case, the cumulated cable length must not exceed 10 meters
- The connection terminals for protective extra low-voltage are located in the upper half of the module, those for mains voltage (actuators and pumps) at the bottom
- Only one solid or stranded wire may be connected to each terminal (spring cage terminals). For fixing the wires, the cables must be stripped by 7 to 8 mm. To introduce the wires into the spring cage terminals, or to remove them, a screw driver size 0 or 1 is required. Cable strain relief can be ensured with the help of the lugs for cable ties
- The module mounted on a top hat rail together with other modules can only be removed from the rail after the 3 catches have been brought into their release and hold position (audible "click"). After removal, the catches must be pushed back into their snap-on position
- The module is supplied complete with Mounting Instructions

# **Commissioning notes**

During the commissioning process, the outputs are in a defined off state.

 
# **Disposal notes**

Larger plastic parts carry material identifications to ISO / DIS 11 469 to facilitate environment-compatible disposal.

# **Technical data**

Power supply	Rated voltage	AC 24 V ±20 % (via the controller)	
	Power consumption	3 VA	
Analog inputs (X…)	Sensors		
<b>U I (</b> <i>)</i>	Passive	1 or 2 LG-Ni 1000, T1, Pt 1000	
	Active	DC 010 V	
	Signal sources		
	Passive	02500 Ω	
	Active	DC 010 V	
Digital inputs (X…)	Contact sensing		
status and counting	Voltage		
values)		DC 15 V	
	Current	5 mA	
	Requirements for the status and impulse con-		
	tacts		
	Signal coupling	potential-free	
	Type of contact	maintained or impulse contacts	
	Insulating strength against mains potential	AC 3750 V to EN 60 730	
	Perm. resistance		
	Contacts closed	max. 200 Ω	
	Contacts open	min. 50 k $\Omega$	


# Low-voltage side



Mains voltage side

Positioning outputs	Output voltage	DC 010 V		
(Y1, Y2)	Output current	±1 mA		
	Max. load	continuous short-circuit		
▲ Switching outputs	External supply line fusing			
∠:⊃ (Q)	Non-renewable fuse (slow)	max. 10 A		
	Automatic line cutout	max. 13 A		
	Release characteristic	B, C, D to EN 60 898		
	Cable length	max. 300 m		
	Relay contact data			
	Swichting voltage	max. AC 265 V / min. AC 19 V		
	AC current	max. 4 A res., 3 A ind. (cos $\phi$ = 0.6)		
	At 250 V	min. 5 mA		
	At 19 V	min. 20 mA		
	Switch-on current	max. 10 A (1 s)		
	Contact life at AC 250 V	guide values:		
	At 0.1 A res.	2×10 <sup>7</sup> cycles		
	N.O. contact at 0.5 A res.	4×10 <sup>6</sup> cycles		
	Changeover contact at 0.5 A res.	2×10 <sup>6</sup> cycles		
	N.O. contact at 4 A res.	3×10 <sup>5</sup> cycles		
	Changeover contact at 4 A res.	1×10 <sup>5</sup> cycles		
	Reduction factor at ind. (cos $\varphi$ = 0,6)	0.85		
	Insulating strength			
	Between relay contacts and system			
	electronics (reinforced insulation)	AC 3750 V, to EN 60 730-1		
	Between neighboring relay contacts (opera-			
	tional insulation) Q1 $\Leftrightarrow$ Q2; Q3 $\Leftrightarrow$ Q4	AC 1250 V, to EN 60 730-1		
	Between relay groups (reinforced insulation)			
	[Q1, Q2] ⇔ [Q3, Q4/Q5]	AC 3750 V, to EN 60 730-1		
Power supply external devices (G1)	Voltage	AC 24 V		
	Current	max. 4 A		
Electrical connections	Connection terminals	spring cage terminals		
	For solid wires	0.6 mm dia2.5 mm <sup>2</sup>		
	For stranded wires without ferules	$0.252.5 \text{ mm}^2$		
	For stranded wires with ferules	0.251.5 mm <sup>2</sup>		
Protection	Degree of protection of housing to IEC 60 529	IP20 (when mounted)		
	Safety class to EN 60 730	device suited for use with equipment of		
		safety class II		
Environmental conditions	Operation to	IEC 60 721-3-3		
	Climatic conditions	class 3K5		
	Temperature (housing with electronics)	050 °C		
	Humidity	595 % r.h. (noncondensing)		
	Mechanical conditions	class 3M2		
	Transport to			
	Climatic conditions	IEC 60 721-3-2		
		class 2K3		
	Temperature	-25+70 °C		
	Humidity Mechanical conditions	<95 % r.h.		
	Mechanical conditions	class 2M2		


Classifications to	Mode of operation, automatic controls	type 1B		
EN 60 730	Degree of contamination, controls environmen	ee of contamination, controls environment 2		
	Software class	Α		
	Rated surge voltage	4000 V		
	Temperature for ball-test of housing	125 °C		
Materials and colors	Terminal base	Polycarbonate, RAL 7035 (light-grey)		
	Insert	Polycarbonate, RAL 7035 (light-grey)		
	Packaging	corrugated cardboard		
Standards	Product safety			
	Automatic electrical controls for household and similar use	EN 60 730-1		
	Special requirements for energy controllers			
	Elektrische Systemtechnik für Heim und	EN 00 730-2-11		
	Gebäude (ESHG)	EN 50 090-2-2		
	Electromagnetic compatibility	LN 50 090-2-2		
	Immunity (industrial sector)	EN 61 000-6-2		
	Emissions (domestic sector, light industry)	EN 61 000-6-3		
	Home and Building Electronic System	EN 01 000-0-3		
	(HBES)	EN 50 090-2-2		
	CE conformity to	LN 50 030-2-2		
	EMV directive	89/336/EEC		
	Low-voltage directive	73/23/EEC		
	Conformity to	13/23/220		
	Conformity to Australian EMC Framework	Radio communication act 1992		
	Radio Interference Emission Standard	AS/NZS 3548		
Weight	RMZ785 (excl. packaging)	0.25 kg		
	RMZ787 (excl. packaging)	0.30 kg		
	RMZ788 (excl. packaging)	0.28 kg		
	RMZ789 (excl. packaging)	0.31 kg		

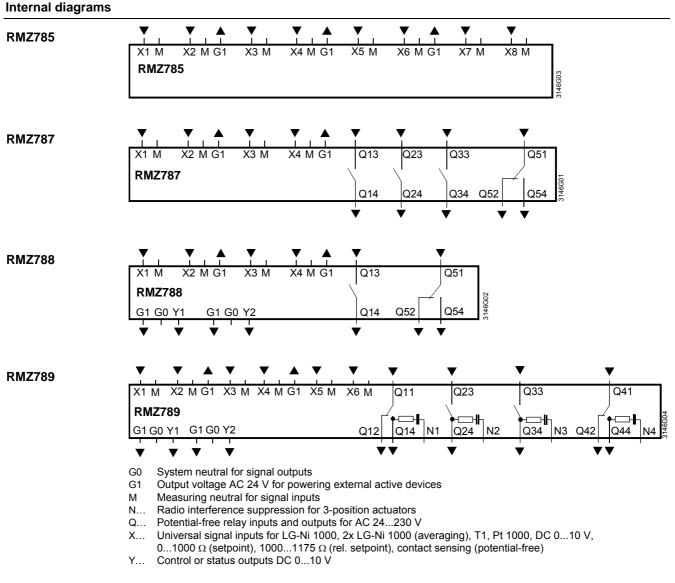

#### Notes

- Each terminal (cage terminal) can accommodate only 1 solid wire or 1 stranded wire
- · Double terminals are internally interconnected

# Dimensions

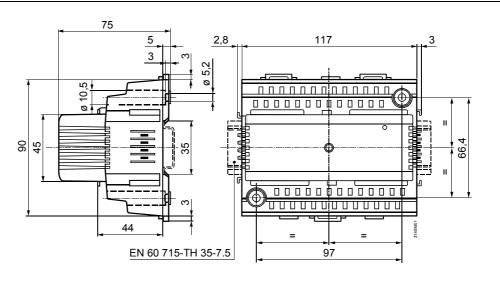

Dimensions in mm