



Service Tool

OCI700.1

ACS plant operating software and OCI700 service interface

Service tool for commissioning and the diagnosis of HVAC controllers of the Synco™, SIGMAGYR® and ALBATROS® ranges.

Use

- Commissioning and the diagnosis of the following types of controllers:
 - Synco controllers
 - SIGMAGYR controllers
 - ALBATROS controllers
- Operation of HVAC plant via Konnex (KNX/TP1) or Local Process Bus (LPB)

Functions

The service tool consists of the ACS plant operating software and the OCI700 service interface.

- The service interface provides signal conversion between the PC's Universal Serial Bus (USB) interface and the controllers' service interface
- The ACS plant operating software provides the following programs and functions:

Service software

<i>Function</i>	<i>Description</i>
Operating Booklet	Visualization and remote operation of all data points transmitted by the connected devices
• Standard	Pages and data points as predefined for each device
• User-defined	Pages and data points as defined by the user
Online Trend	Acquisition and presentation of the dynamic behavior of selected plant data points, with connection to the plant

Parameter Settings	Reading and editing the setting parameters of a device in tabular form
Commissioning Report	Reading the setting values of individual devices, device groups, or of the entire plant
Plant Navigation	Plant view as a tree structure. The makeup of the tree structure corresponds to addressing of the devices.
Connection	Directly via standard USB cable (connector type A to B)

Operating software

<i>Function</i>	<i>Description</i>
Plant Diagram, user-defined	Visualization and remote operation of data points with graphic presentation of plant. Graphic presentation, data points and interconnections as defined by the user
Operating Booklet	Visualization and remote operation of all data points transmitted by the connected devices
• Standard	Pages and data points predefined for each device
• User-defined	Pages and data points as defined by the user
Parameter Settings	Reading and editing the setting parameters of a device in tabular form
Plant Navigation	Plant view as a tree structure. The makeup of the tree structure corresponds to the addressing of the devices
Connection	Directly via standard USB cable (connector type A to B)

Equipment combinations

Devices

The following types of devices can be operated with the service tool:

Synco

- Heating controllers type RMH7..., RMK7...
- Universal controllers type RMU7..., RLU2...
- Individual room controllers type RXB...
- Room units type QAW7...
- Central communication unit OZW771

SIGMAGYR

- Heating controllers type RVL4..., RVP3..., RVP5...
- District heating controllers type RVD2...
- Central communication units OCI6...

ALBATROS

- Heating controllers type RVA..., RVS...

AEROGYR

- Ventilation controllers type RWI65...

Minimum PC requirements

The minimum requirements placed on the PC are the following:

<i>PC component</i>	<i>Minimum requirement</i>
Processor	Pentium 100 MHz, recommended 233 MHz
RAM	32 MB, recommended 128 MB
Hard disk	Available storage capacity 350 MB, recommended: additional 20 MB per plant
Screen	VGA standard driver 800 × 600, 256 colors Recommended: SVGA standard driver 1028 × 768
Interfaces	<ul style="list-style-type: none"> • USB1.1 and higher or serial COM up to 19,200 Baud (directly or via modem) • Parallel port for copy protection
Operating system	<ul style="list-style-type: none"> • Windows 98, second edition • Windows ME • Windows 2000 • Windows XP

	<ul style="list-style-type: none"> Windows NT 4.0 service pack 6: Operation with the OCI700 service interface is not possible since Windows NT does not support the USB interface as standard
CD-ROM drive	Single

Type summary

The service tool is supplied as a complete product. It requires no license.

<i>Type reference</i>	<i>Copy protection</i>
OCI700.1	Not required

Ordering and delivery

Ordering

When ordering, please give type reference **OCI700.1**.

Delivery

The service tool is supplied as a set in a service case.

- CD-ROM with:
 - Operating software
 - Service software
 - Documentation
- Installation Instructions
- OCI700 service interface
- USB cable
- Service cable for Synco controllers
- Service cable for SIGMAGYR and ALBATROS controllers

Extra packages

The operating and service software supplied with the OCI700.1 corresponds to that of the ACS700 (refer to Data Sheet CE1N5641en).

Extra packages are used to extend the scope of functions of the standard packages.

Based on the ACS700 standard package, a CMD.01 is required.

For more detailed information, refer to Data Sheet CE1N5640en (ACS7...).

Documentation

Software

<i>Type reference</i>	<i>Type of documentation and number</i>
ACS7...	Basic Documentation CE1P5640en * User Manual CE1U5640en Installation Instructions CE1G5640en
ACS700	Data Sheet CE1N5641en
ACS712	Data Sheet CE1N4563en
ACS713	Data Sheet CE1N5644en
ACS715	Data Sheet CE1N5645en
ACS741	Data Sheet CE1N5647en
ACS785	Data Sheet CE1N5648en

* in preparation

Systems


<i>System</i>	<i>Type of documentation and number</i>
Synco™ 700 / Synco™ RXB HVAC Controls with Konnex Interface	Range Description CE1S3110en
Konnex bus	Data Sheet CE1N3127en
Konnex bus, system description	Basic Document CE1P3127en
ACS600 operating software and OCI600 central communication unit	Basic Documentation CE1P2529en

LPB, System Engineering	Basic Documentation CE1P2370E
LPB, Basic Engineering Data	Data Sheet CE1N2032E
LPB, Basic System Data	Data Sheet CE1N2030E

Technical design

Communication

The service or operating software facilitates direct data exchange with the above mentioned devices via the PC's USB interface and the service interface:

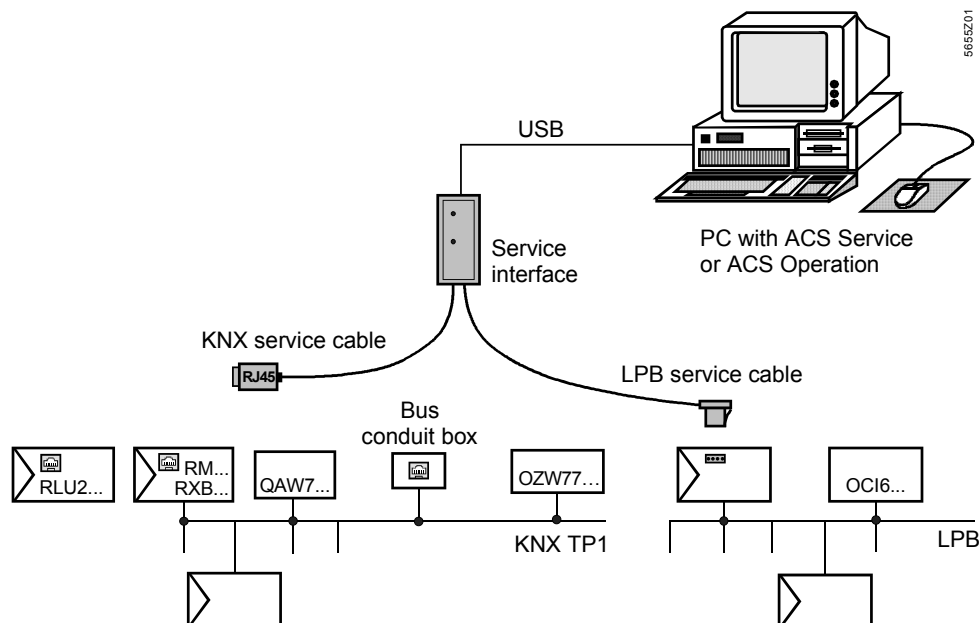

- The service interface can communicate via the LPB or the KNX service cable
- Only 1 service interface can be connected to the PC's USB interface at a time
- Connection to the devices can be made as follows:
 - Via the service interface
 - Via the bus (for that, the cable must be appropriately prepared; for details, refer to "Connections")
 - Via the KNX bus conduit box

Interfaces

The service interface has the following ports:

- For USB cable, socket type B
- For KNX service cable, socket RJ45
- For LPB service cable, socket RJ12

Parameterization of service tool

- The service interface need not be parameterized
- With the service or operating software, the relevant type of server (OCI700-KNX or OCI700-LPB) must be selected in order to be able to make a connection to the devices

Diagnosing and commissioning the controllers

The service or operating software can be used to change or display the following values and parameters of the connected controllers (examples):

- Temperature
- Setpoints
- Limitations
- Operating modes
- Weekly and holiday programs

Operating software and service software

General

The operating software and the service software include applications with the following choices:

- Following applications can be started several times and operated in parallel:
 - Plant Diagram
 - Operating Booklet
 - Parameter Settings
 - Online Trend
 - Commissioning Report
- Several applications can be run simultaneously (e.g. Plant Diagram and Operating Booklet)
- Active applications (e.g. Parameter Settings) can operate in the background
- User-defined adjustments can be made on the following applications:
 - Plant Diagram
 - Operating Booklet
- The software contains a device description of every supported device. The device descriptions define:
 - The data points with the associated properties
 - The interconnections between applications

Plant Diagram

This application permits the graphic presentation of plant (individual devices or groups of devices) with the following choices:


- Automatic updating of process values in the diagram
- Changing setpoints in the diagram
- Links to other diagrams can be established

A user-defined plant diagram can be defined for every device. The procedure is the following:

- Use external graphic software (e.g. Micrografx Picture Publisher™) for the graphic presentation. The graphs can be adopted in bitmap format
- For the inclusion of data points and links, the application has an Editor integrated

All plant diagrams are stored in a library. They can also be created without having a connection to the plant (offline).

The plant diagrams can be printed out.

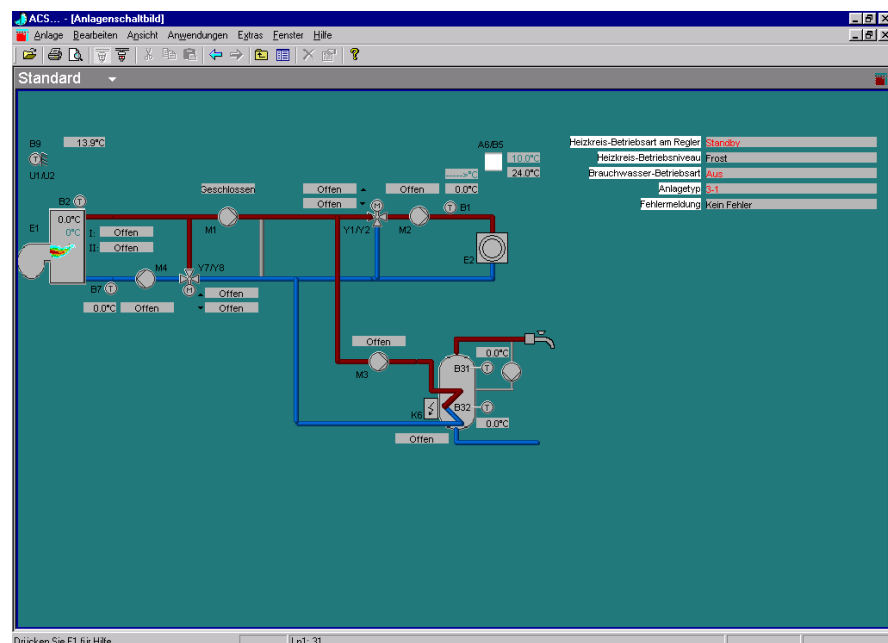

This application is used to visualize the transmitted data points of each device, and their values.

Each type of device uses a standard Operating Booklet; makeup and contents of the operating pages are predefined.

User-defined Operating Booklets can be created for each device and each node. Data points of all subordinate devices can be added to an Operating Booklet that is assigned to a node. Standard and user-defined Operating Booklets can be copied to devices of the same type or to superposed nodes.


The user-defined Operating Booklet offers the following features:

- It can consist of several user-defined pages
- Every page can be subdivided into several user-defined sections
- Freely selectable data points and separators can be assigned to the Operating Booklet, the pages and sections

Switching between the standard and the user-defined Operating Booklet is possible at any time.

Every selected page is automatically updated. The updating process is visualized.

The operating pages can be printed out and exported as an ASCII file.

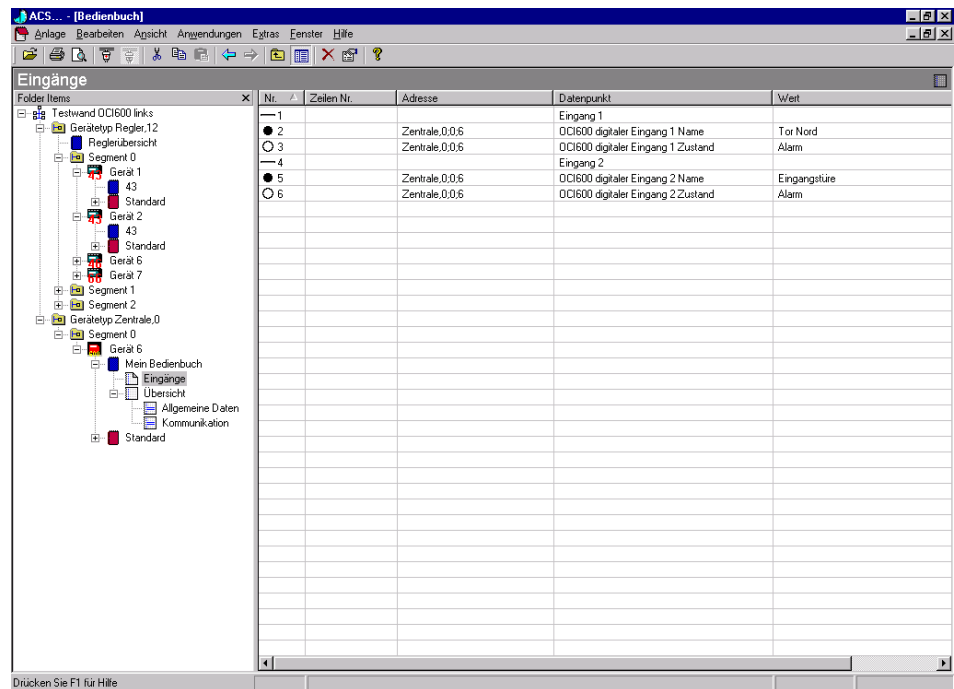


Online Trend

This application allows any data points of a plant to be logged. The connection between plant and PC is established. All acquired data are stored directly on the PC. The graphic presentation of trend logging takes place online.

The description, the selected data points of all devices of the plant and the sample interval are defined in the trend definition.

In trend logging, the cyclically queried data are stored and graphically presented. Earlier trend logging can be graphically shown again at any time.

Trend logging can be printed out and exported as an ASCII file.

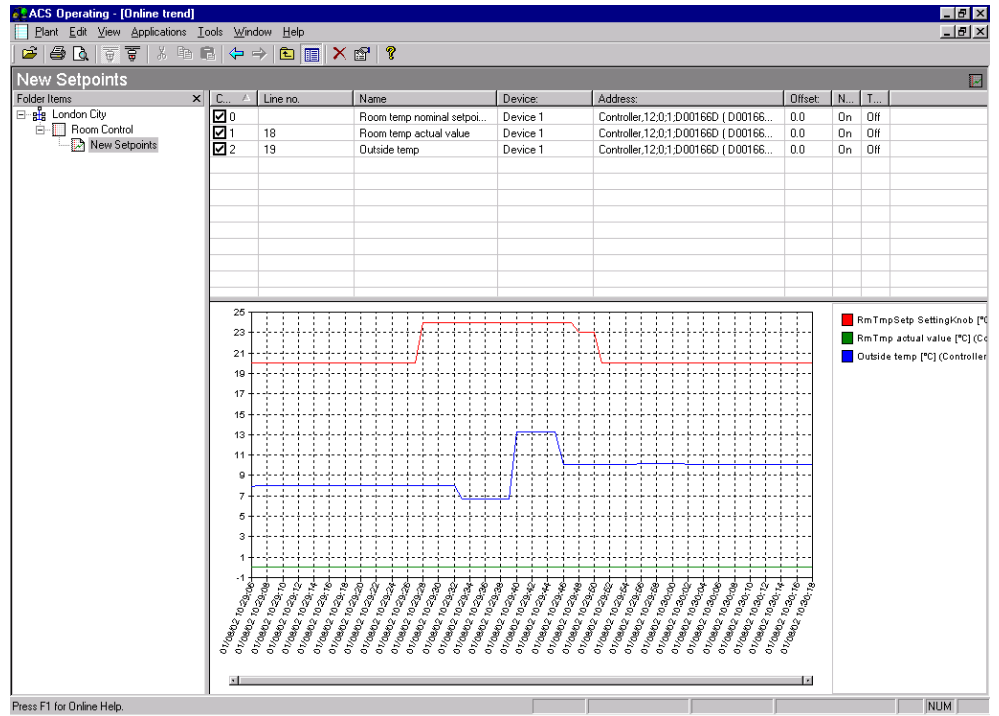

Parameter Settings

This application is used to download, upload or compare the settings of the connected devices.

The settings can be

- stored as a parameter set
- compared with a parameter set
- compared with the standard parameter set
- overwritten with a stored parameter set
- overwritten with the standard parameter set

The parameter sets can be edited either online or offline. The data points of a parameter set can be individually selected. The transmitted result of uploading, downloading or comparing is displayed online.

The parameter set can be printed out or exported as an ASCII file.

The screenshot shows the 'ACS... [Parametrierung]' software interface. On the left, a tree view shows the folder structure: 'Testwand OCI600 links', 'Gerätetyp Regler,12', 'Segment 0', 'Gerät 1', 'Standard', 'Gerät 2', 'Standard', 'Endbenutzer', 'Fachmann', 'DEM-Parameter', 'Diverses', 'Gerät 6', 'Gerät 7', 'Segment 1', 'Segment 2', and 'Gerätetyp Zentrale,0'. The main area displays a table with 16 rows of parameters. The table has columns for 'Nr.', 'Zeilen Nr.', 'Adresse', 'Datenpunkt', 'Wert', 'Einheit', and 'Übertragung...'. The data is as follows:

Nr.	Zeilen Nr.	Adresse	Datenpunkt	Wert	Einheit	Übertragung...
1		Regler,12,0,2	Heizkreis-Betriebsart am Regler	Automatik		OK
2		Regler,12,0,2	Uhrzeit (Wochenuhr)	Montag, ---		OK
3		Regler,12,0,2	Zeitschalprogramm Montag	06:00 - 22:00	hm	OK
4		Regler,12,0,2	Zeitschalprogramm Dienstag	06:00 - 22:00	hm	OK
5		Regler,12,0,2	Zeitschalprogramm Mittwoch	06:00 - 22:00	hm	OK
6		Regler,12,0,2	Zeitschalprogramm Donnerstag	06:00 - 22:00	hm	OK
7		Regler,12,0,2	Zeitschalprogramm Freitag	06:00 - 22:00	hm	OK
8		Regler,12,0,2	Zeitschalprogramm Samstag	06:00 - 22:00	hm	OK
9		Regler,12,0,2	Zeitschalprogramm Sonntag	06:00 - 22:00	hm	OK
10		Regler,12,0,2	Brauchwasser-Betriebsart	Ein		OK
11		Regler,12,0,2	Brauchwassertemperatur-Nennsollwert	55	°C	OK
12		Regler,12,0,2	Raumtemperatur-Reduziertensollwert	16,0	°C	OK
13		Regler,12,0,2	Raumtemperatur-Frostschutzsollwert	10,0	°C	OK
14		Regler,12,0,2	Sommer/Winter Umschalttemperatur	17,0	°C	OK
15		Regler,12,0,2	Heizkennlinien-Steilheit	15,0		OK
16		Regler,12,0,2	Ausserntemperatur	0,0	°C	OK

Commissioning Report

This application is used to log the setting values of individual devices, groups of devices, or entire plants.

The data points of the selected devices are stored with data point designation, value, unit and status.

The commissioning report can be printed out and exported as an ASCII file.

The screenshot shows the 'ACS - [Inbetriebnahmeprotokoll]' window. The left pane displays a tree structure under 'Endbenutzer' with folders for 'Gerät 2' and 'Gerät 3'. The main table lists data points for 'Regler.12.1.2' with columns for 'Nr.', 'Zeilen Nr.', 'Adresse', 'Datenpunkt', 'Wert', and 'Einheit'.

Nr.	Zeilen Nr.	Adresse	Datenpunkt	Wert	Einheit
1		Regler.12.1.2	Heizkreis-Betriebsart am Regler	Automatik	
2		Regler.12.1.2	Handbetrieb	Aus	
3		Regler.12.1.2	Brauchwasser-Betriebsart	Aus	
4		Regler.12.1.2	Raumtemperatur-Sollwert Korrektur	-0.1	°C
5		Regler.12.1.2	Analoge Heizkennlinie: Vorkautemp bei +15°C	20.4	°C
6		Regler.12.1.2	Analoge Heizkennlinie: Vorkautemp bei -5°C	63.4	°C
7		Regler.12.1.2	Uhrzeit	Donnerstag, 19 ...	
8		Regler.12.1.2	Aussettemperatur	-2.1	°C
9		Regler.12.1.2	Fühler an Klemme B1	44.5	°C
10		Regler.12.1.2	Raumtemperatur-Istwert	<Gerätestörung>	°C
11		Regler.12.1.2	Raumtemperatur-Nennsollwert	13.0	°C
12		Regler.12.1.2	Raumtemperatur-Reduziersollwert	14.0	°C
13		Regler.12.1.2	Raumtemp-Sollwert Feienbetrieb/Frostschutz	10.0	°C
14		Regler.12.1.2	Brauchwassertemperatur-Nennsollwert	55	°C
15		Regler.12.1.2	Brauchwassertemperatur-Istwert wärmer	----->	°C
16		Regler.12.1.2	Fehlermeldung	Kein Fehler	

Plant Navigation

For plant navigation, the plant is presented in the form of a tree structure, in accordance with device addressing. The following applications support this mode of presentation:

- Plant Diagram
- Operating Booklet
- Online Trend
- Parameter Settings
- Commissioning Report
- The plant view as a tree structure can be displayed or hidden.

The screenshot shows the 'ACS - [Bedienbuch]' window. The left pane displays a detailed tree structure for 'Endbenutzer 3', including folders for 'Haus 21', 'Haus 23', 'Haus 25', and 'Heizzentrale'. The main table lists data points for 'Regler.12.0.7' with columns for 'Nr.', 'Zeilen Nr.', 'Adresse', 'Datenpunkt', 'Wert', and 'Einheit'.

Nr.	Zeilen Nr.	Adresse	Datenpunkt	Wert	Einheit
1		Regler.12.0.7	Brauchwassertemperatur-Nennsollwert	55	
2		Regler.12.0.7	Raumtemperatur Reduziersollwert	16.0	
3		Regler.12.0.7	Raumtemperatur Frostschutzsollwert	10.0	
4		Regler.12.0.7	Sommer/Winter Umzuschalttemperatur Heizkreis	17.0	
5		Regler.12.0.7	Heizkennlinien-Stellwert	15.0	
6		Regler.12.0.7	Raumtemperatur-Istwert	0.0	
7		Regler.12.0.7	Aussettemperatur	0.0	
8		Regler.12.0.7	Fehlermeldung	Kein Fehler	

Mechanical design of service interface



Basic design	The service interface is accommodated in a compact plastic housing. 2 LEDs indicate the correct functioning of the device. The interfaces of the service interface are galvanically separated.
USB indication	LED lit: Operating voltage present at the service interface LED flashes: Data exchange between service interface and PC
Bus indication	LED lit: Connection to the service interface is established LED flashes: Data exchange via the service interface
Power supply	The service interface is powered via the USB interface and the controllers' service interfaces. If used, it shortens the operating time of a laptop's storage battery only to a small extent.

Notes

Installation	The service interface is not designed for fixed mounting.
Commissioning	The software should be installed according to the Installation Instructions supplied with the CD.
Operation	The ACS plant operating software offers a standard Windows Help function. This means that a description of the commands and menus is available at any time.

Technical data


Power supply	Operating voltage (via USB) Current draw	DC 5 V as per USB specification max. 26 mA
Norms and standards	CE conformity to EMC directive Low-voltage directive A conformity to Australian EMC Framework Electromagnetic compatibility Immunity Emissions	89/336/EEC 73/23/EEC Radio communication act 1992 EN 61000-6-2 and EN 50090-2-2 EN 61000-6-3 and EN 50090-2-2
Degrees of protection	Degree of protection	IP20 to EN 60529

KNX interface	Connection	(2-wire, not interchangeable)
	Length of service cable	3 m
	Baud rate	9,600 Baud
	Bus loading number (E)	dynamic / adaptive
	Physical Layer RM..., RXB..., QAW7...	TP1
	Physical Layer RL...	3V (TTL)
	For more information about the KNX bus, refer to	Basic Documentation CE1P3110en
LPB interface	Norm	Batibus-compatible
	Connection	(2-wire, not interchangeable)
	Length of service cable	3 m
	Baud rate	4,800 Baud
	Bus loading number (E)	dynamic / adaptive
	For more information about the LPB, refer to	Data Sheet CE1N2032E Data Sheet CE1N2030E Basic Documentation CE1P2370E
	USB interface	Norm
Length of service cable		0.6 m (max. permissible: 5 m)
Device class		HID (Human Interface Device)
Baud rate		max. 12 Mb/s (Full Speed)
Connecting cable		
Connector on PC		USB type A
Connector on OCI700		USB type B
Permissible ambient conditions	Transport	
	Temperature	-25...+70 °C
	Humidity	<95 % r.h. (noncondensing)
	Storage	
	Temperature	-5...+55 °C
	Humidity	<95 % r.h. (noncondensing)
	Operation	
	Temperature	0...+50 °C
	Humidity	<85 % r.h. (noncondensing)
Weight	Case, complete with packaging	1.2 kg

Connections


The OCI700 service interface has the following connectors:

Pin assignment KNX, RJ45

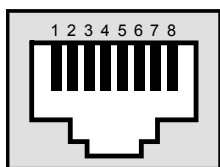

- 1 CE+, Konnex
- 2 CE-, Konnex
- 3 Not used
- 4 Not used
- 5 Voltage input 16 V
- 6 Transmission line to RLU2...
- 7 Reception line from RLU2...
PPS RXB...
Identpin RM...
- 8 Ground


Pin assignment LPB, RJ12

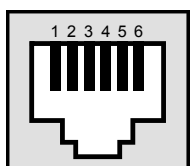

- 1 Not used
- 2 Not used
- 3 DB, LPB
- 4 MB, LPB
- 5 Identpin
- 6 Not used

Dimensions

Service interface

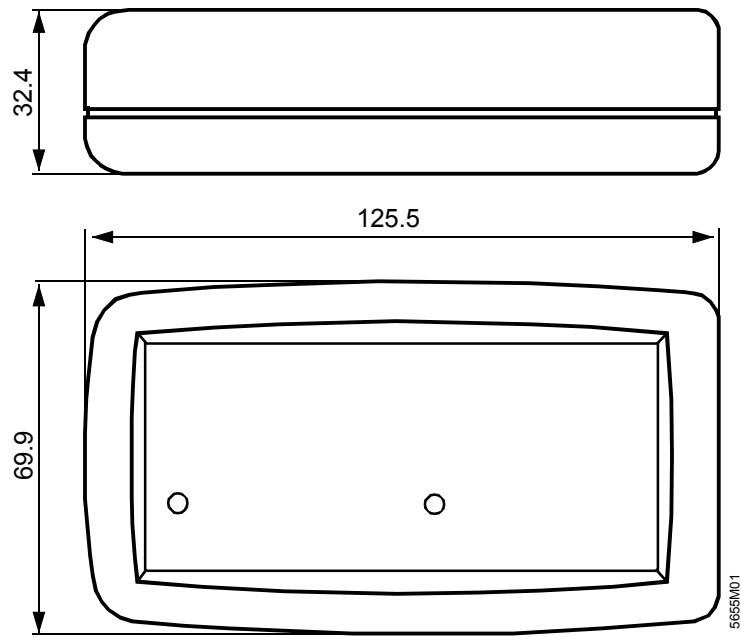

Dimensions in mm